



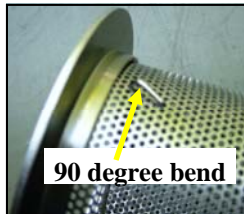

STF-104TN 100 micron Thermal Nylon Filter Sock

Installation Instructions

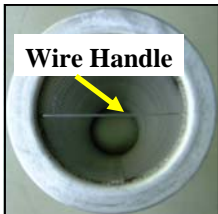

Before Sock Installation:

If you have a standard filter screen with a wire handle installed in it, straighten out the 90 degree bend in the wire on one side and pull the wire out of the handle from the other side.


Step 1 Insert sock into the filter screen so that equal lengths stick out of both ends.



Tips:

Fold the sock in half (the long way) before inserting into the screen. The end of the sock marked as "top" should be sticking out of the top of the filter screen (the end with the larger flange).

Step 2 Wrap sock material around top of filter screen and secure with o-ring.

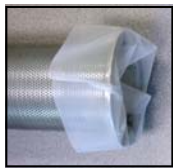

Tips:

The o-ring will secure the sock in place during use and will allow for the sock to be pulled tight during installation.

Step 3 Wrap sock material around bottom of filter screen and secure with o-ring.



Tips:

The sock material should be pulled tight, although there will still be some wrinkling even when it is tight.

Step 4 Look through end of filter screen and confirm that sock is not twisted.



Tips:

If sock is twisted, grab the sock over one of the flanges and twist until sock is straight.

Step 5 Dispose of the old filter sock in accordance with state and local regulations.

Important Notes:

- Socks filter out much finer solids than the filter screen and will most likely require more frequent service depending upon the application.
- If choosing to reuse the sock, make sure that there is no visible damage to the sock.