




## Extension Kit for the TruCore Sludge Sampler

## Installation Instructions

**Step 1** Cut 1-1/4" pvc pipe to the desired length.

**Tips:**

Any schedule of pipe will work, but lightweight SDR26 is recommended.

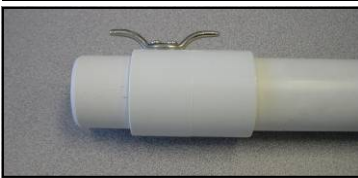

**Step 2** Place the extension kit fitting on either end of the pipe.



**Step 3** Starting on the fitting end of the pipe, thread the quick link end of the rope through the fitting and pipe.



**Step 4** Remove the foam ball handle from the TruCore rope.

**Tips:**

The rope is strung through the eye bolt and looped around the ball, so you do not need to untie any knots. You only need to unloop the rope from around the ball.



**Step 5** Attach the quick link to the TruCore rope.



**Step 6** Insert the pipe into the TruCore fitting.

### **Important Notes:**

- The standard kit is designed to allow an extension of up to 8 feet.
- A video demonstration of these instructions is available on our website or you can go to [www.youtube.com](http://www.youtube.com) and search for TruCore.