



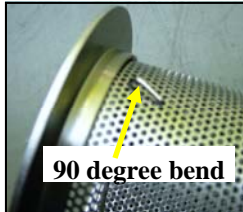

STF-104 Poly-Knit Filter Sock


Installation Instructions

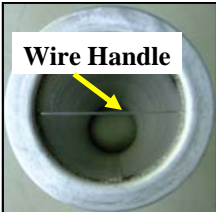

Before Sock Installation:

If you have a standard filter screen with a wire handle installed in it, straighten out the 90 degree bend in the wire on one side and pull the wire out of the handle from the other side.

Step 1 **Insert sock into the filter screen so that equal lengths stick out of both ends.**



Tips:

Fold the sock in half (the long way) before inserting into the screen.

Step 2 **Wrap sock material around the top and bottom of filter screen.**



Tips:

The sock material should be pulled tight, although there will still be some wrinkling even when it is tight.

Step 4 **Look through end of filter screen and confirm that sock is not twisted.**



Tips:

If the sock is twisted, grab the sock over one of the flanges and twist until the sock is straight.

Step 5 **Dispose of the old filter sock in accordance with state and local regulations.**

Important Notes:

- Socks filter out much finer solids than the filter screen and will most likely require more frequent service depending upon the application.
- If choosing to reuse the sock, make sure that there is no visible damage to the sock.